

Mercury Spillage Kit


Type HK

Instructions for Use



MERCURY


SAFETY PRODUCTS LTD

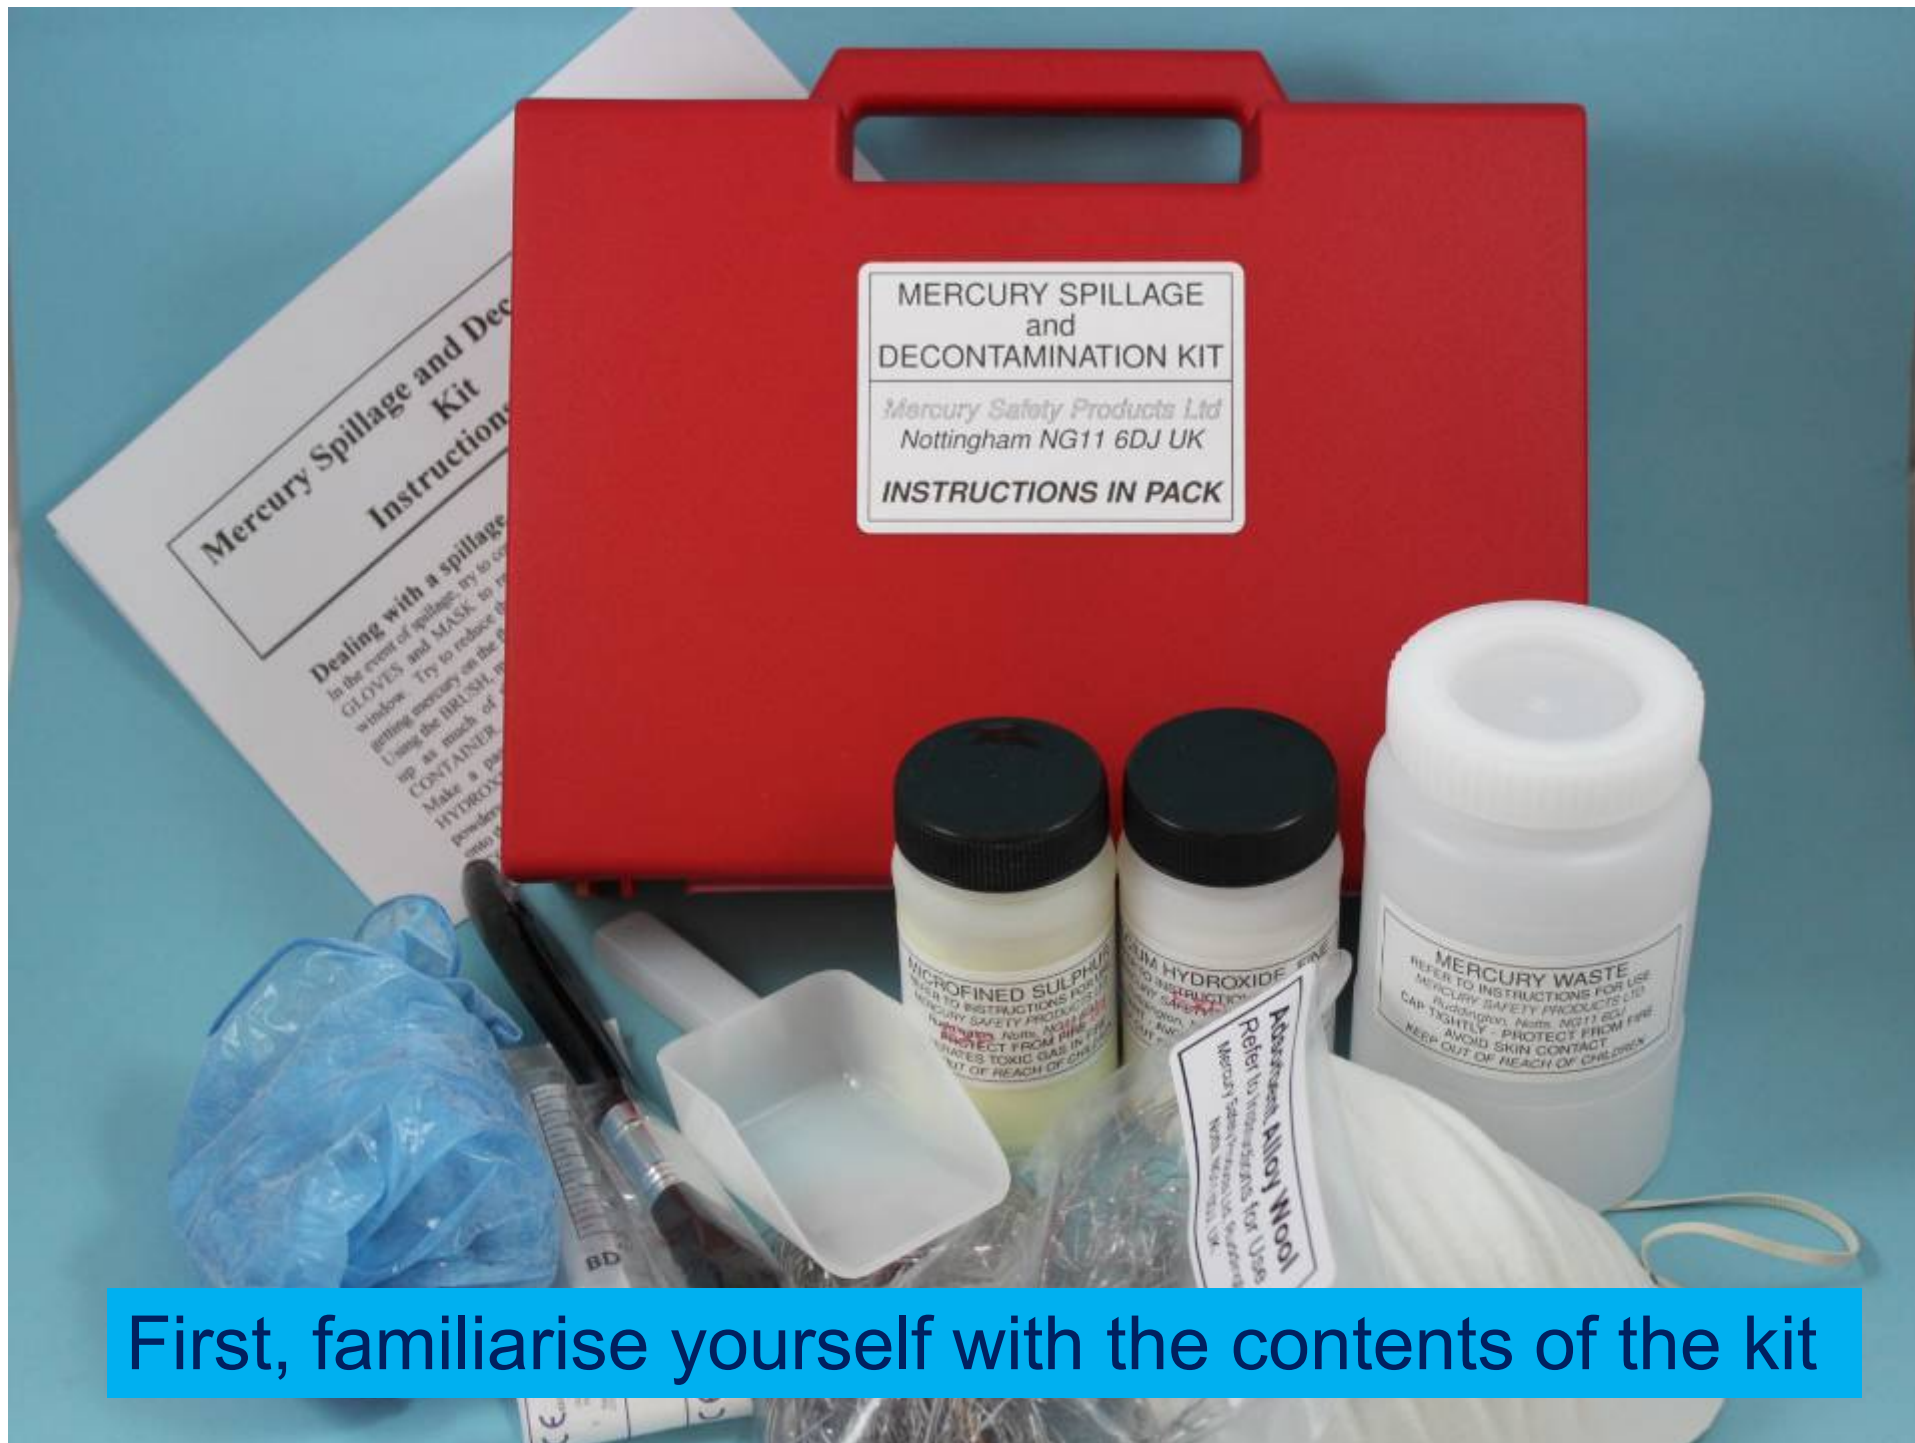


First, familiarise yourself with the contents of the kit

Part 1: mercury spillage on a hard surface

First of all, put on the dust mask and gloves

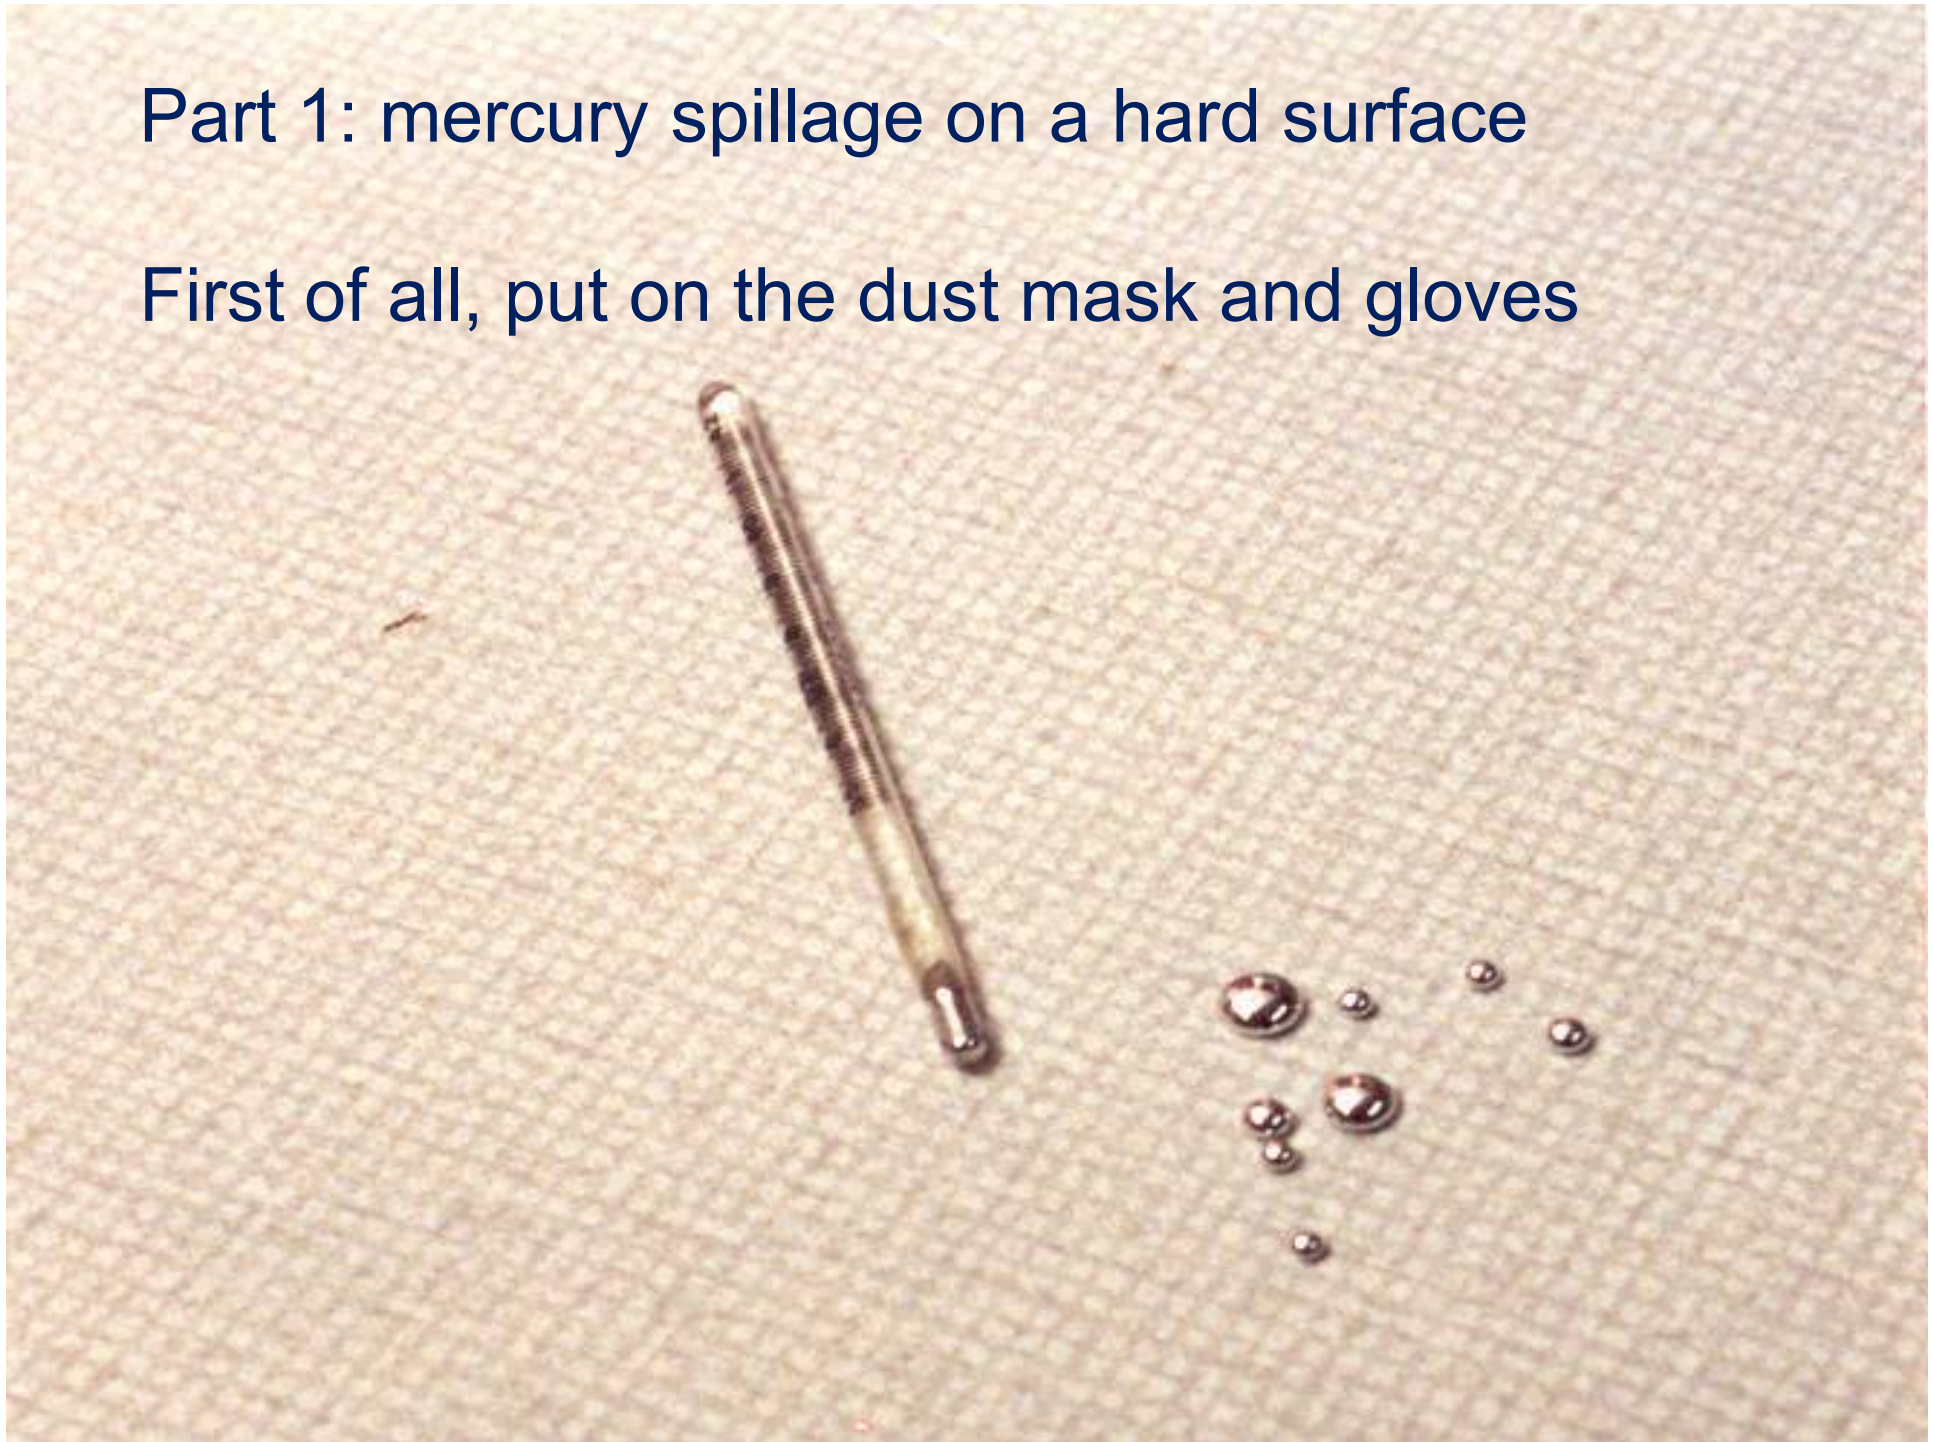


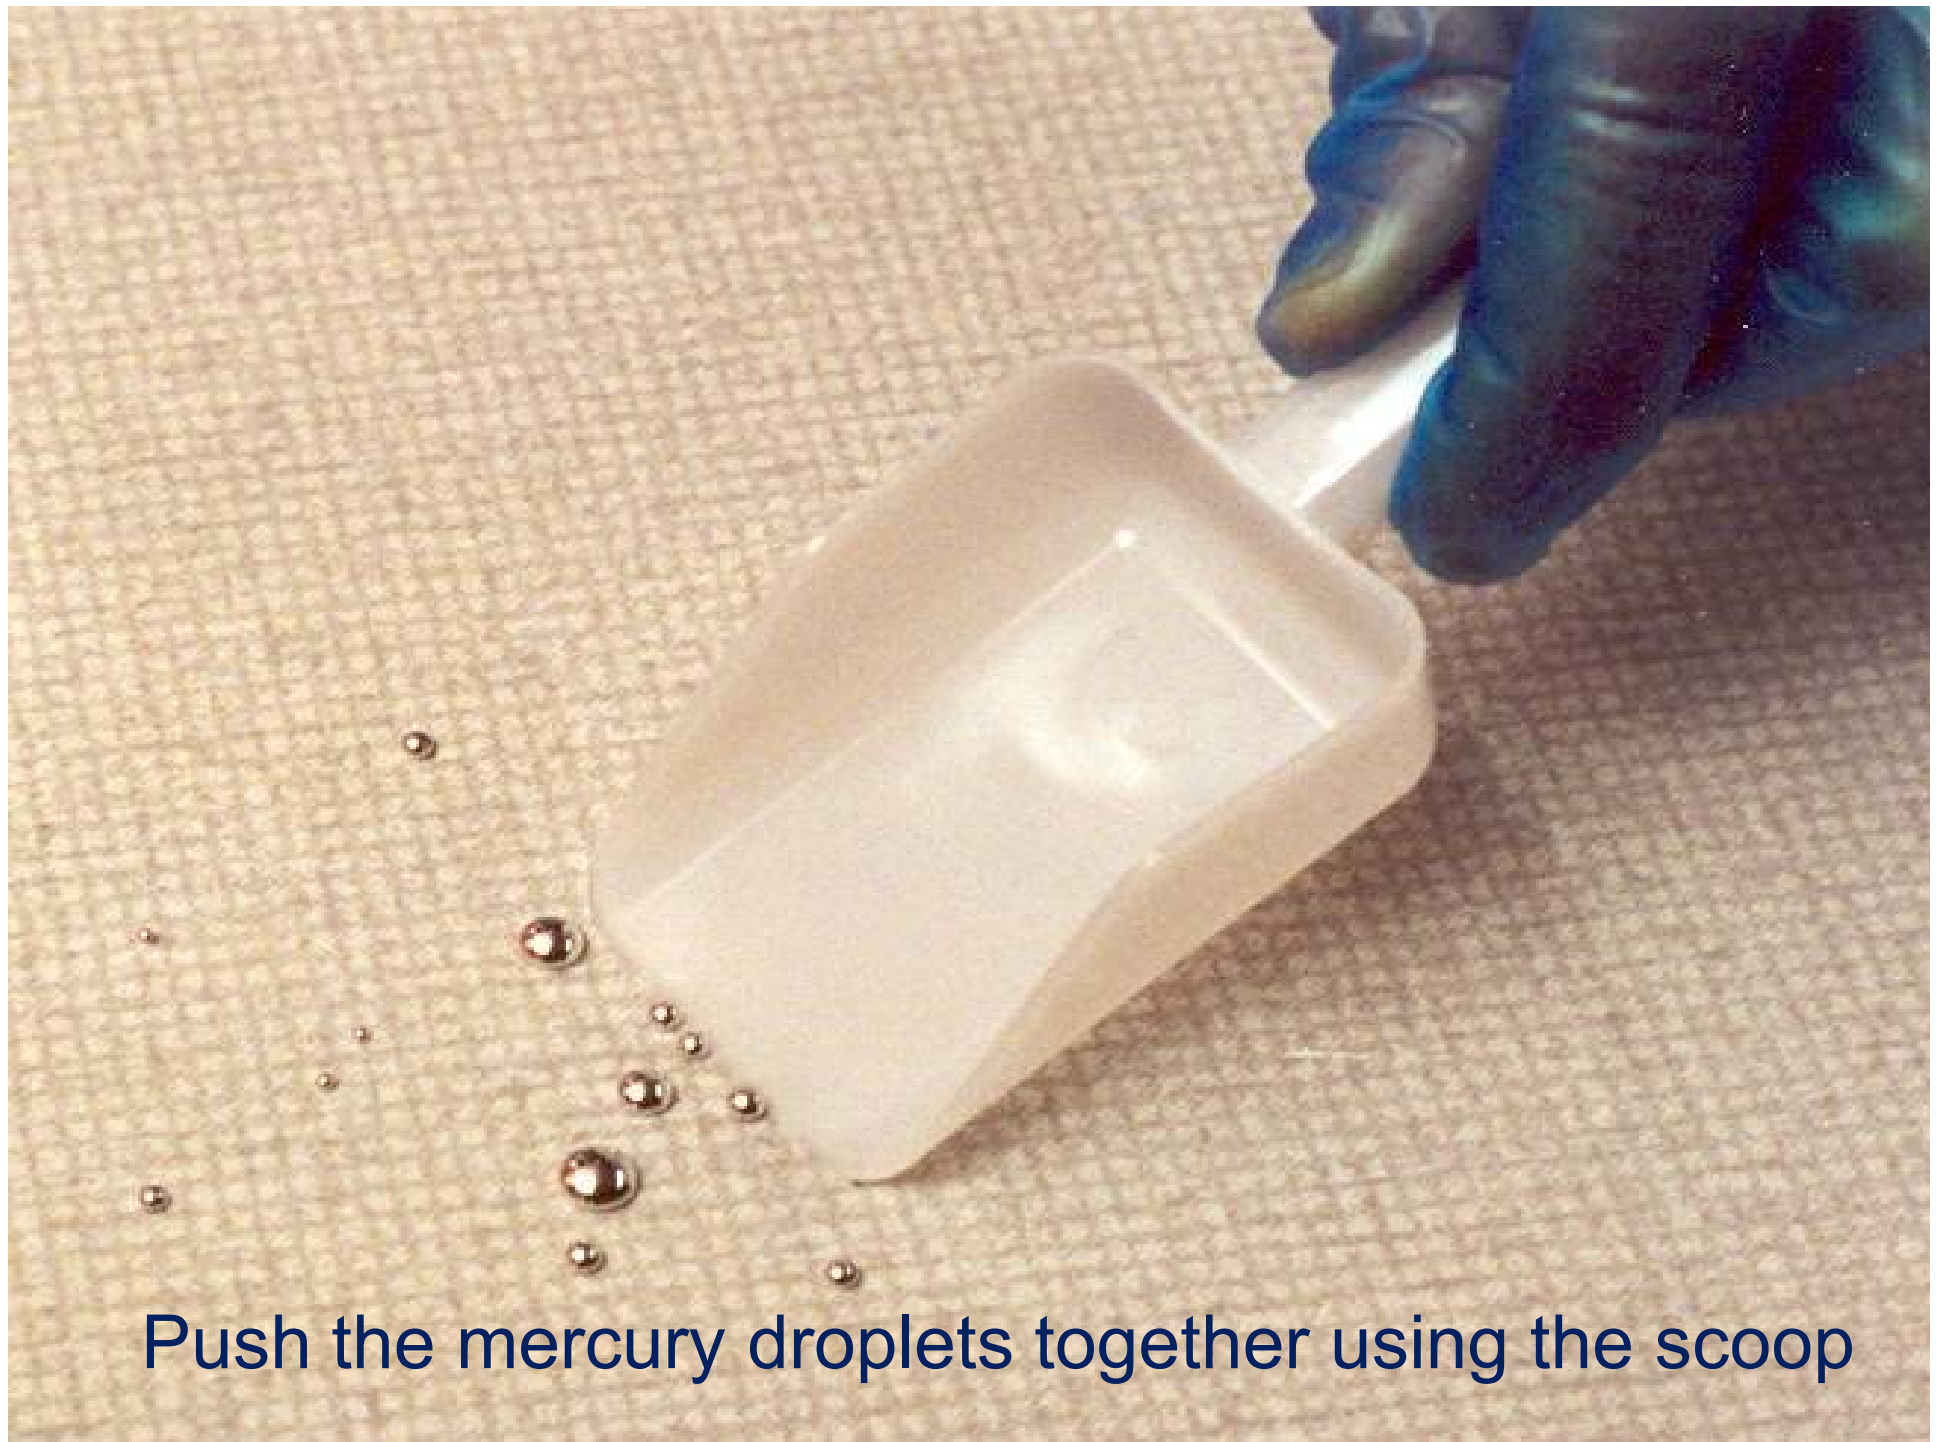


Push the mercury droplets together using the scoop

Then collect them using the syringe
and transfer to the waste bottle




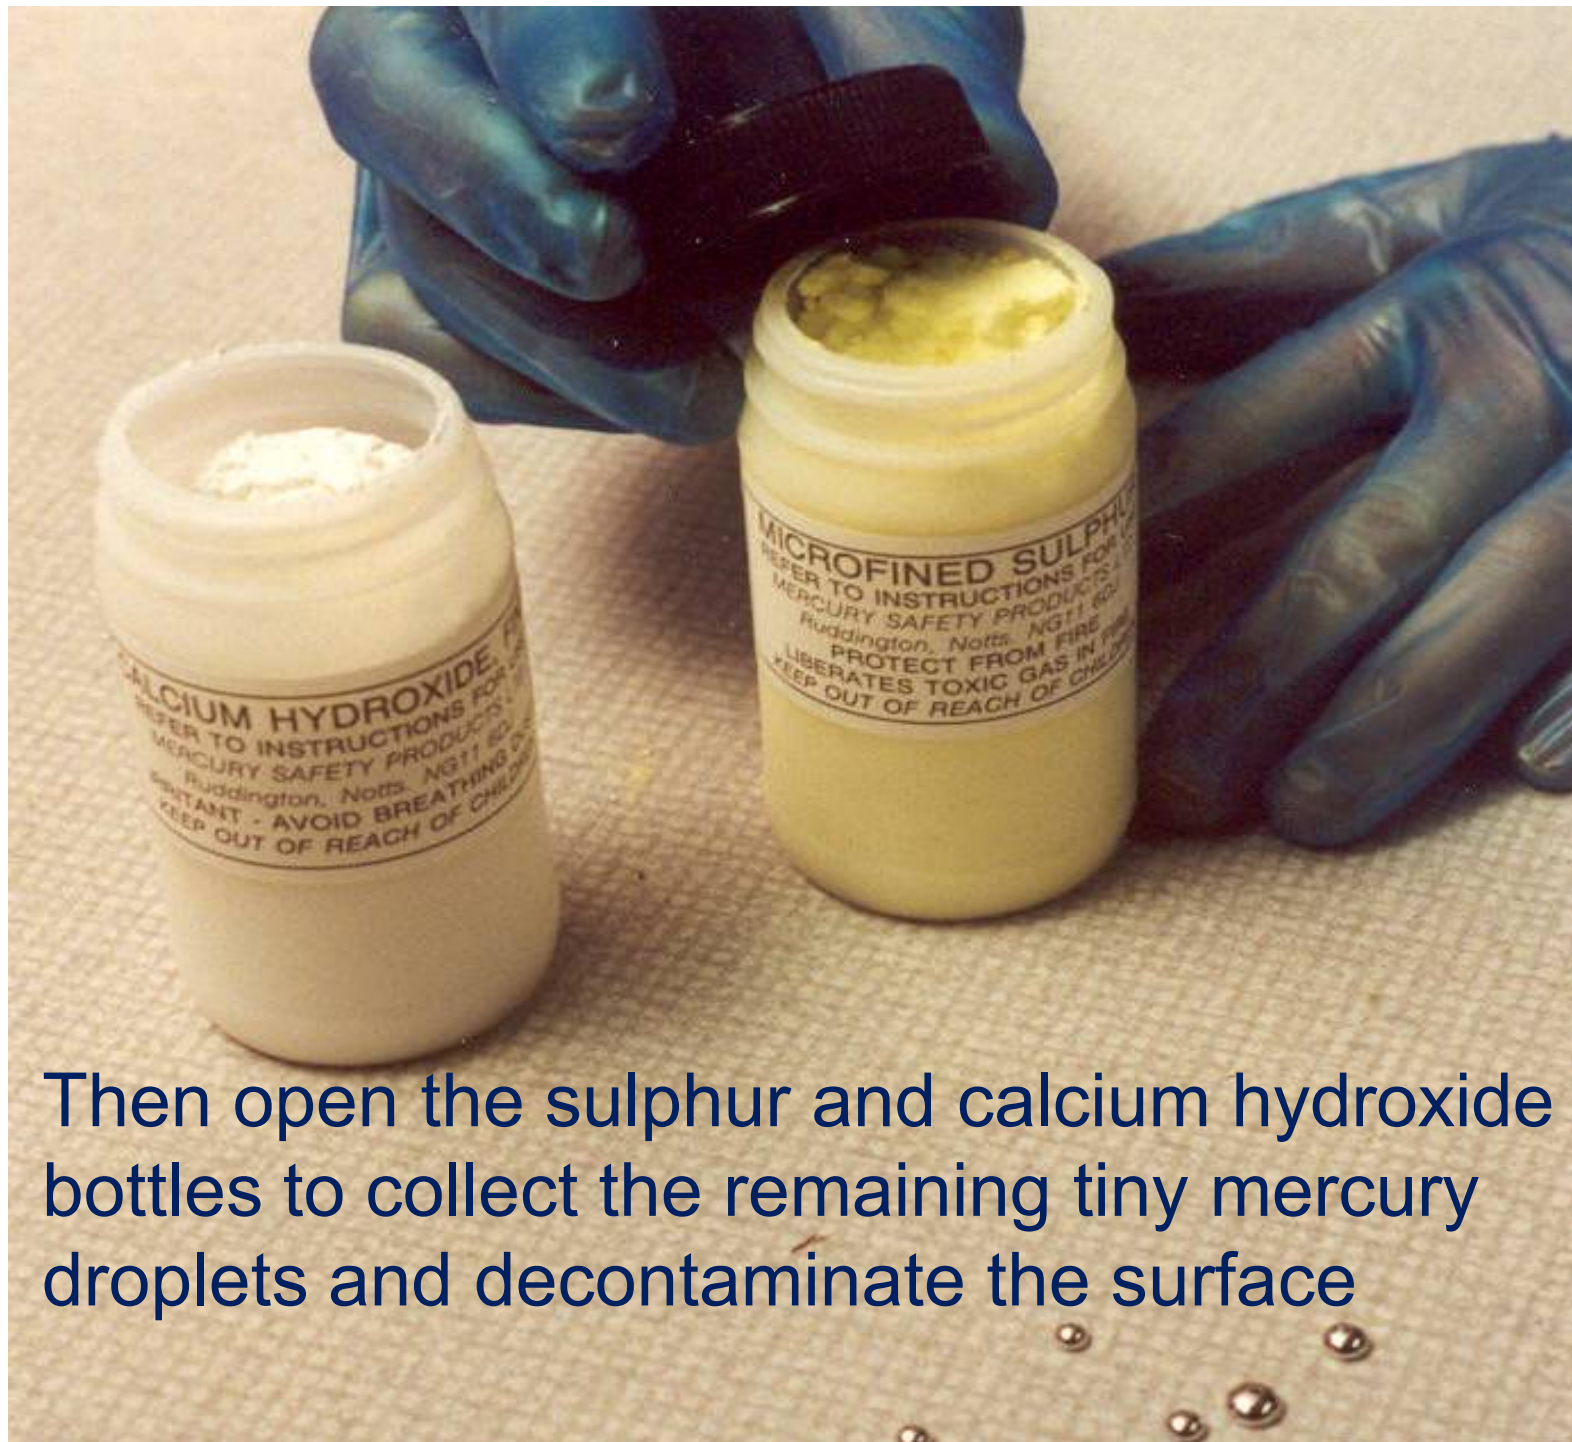


Then open the sulphur and calcium hydroxide bottles to collect the remaining tiny mercury droplets and decontaminate the surface

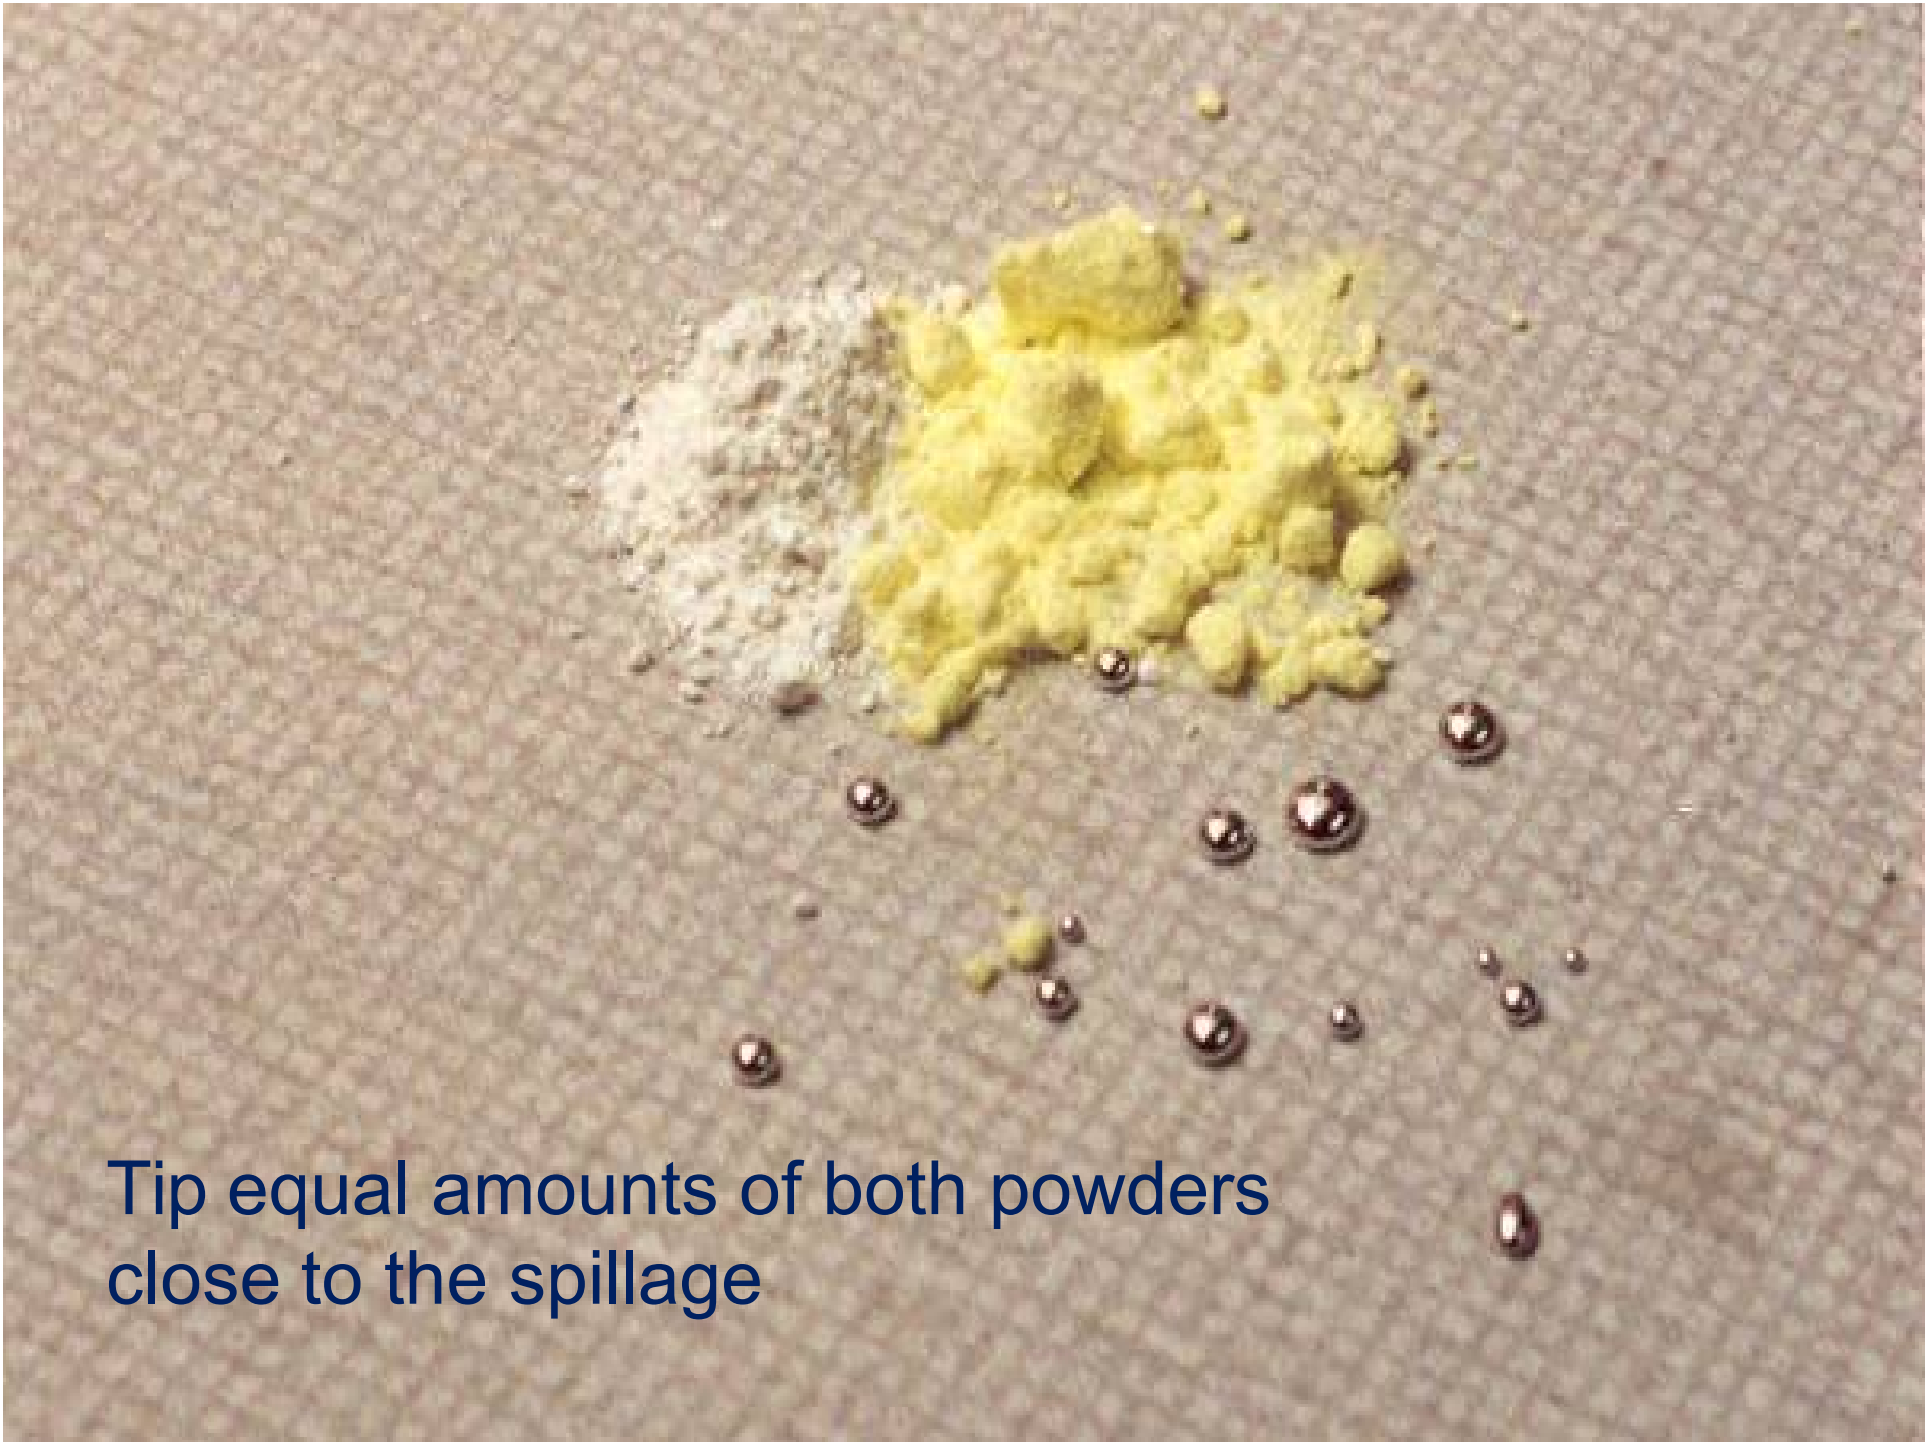

Tip equal amounts of both powders
close to the spillage

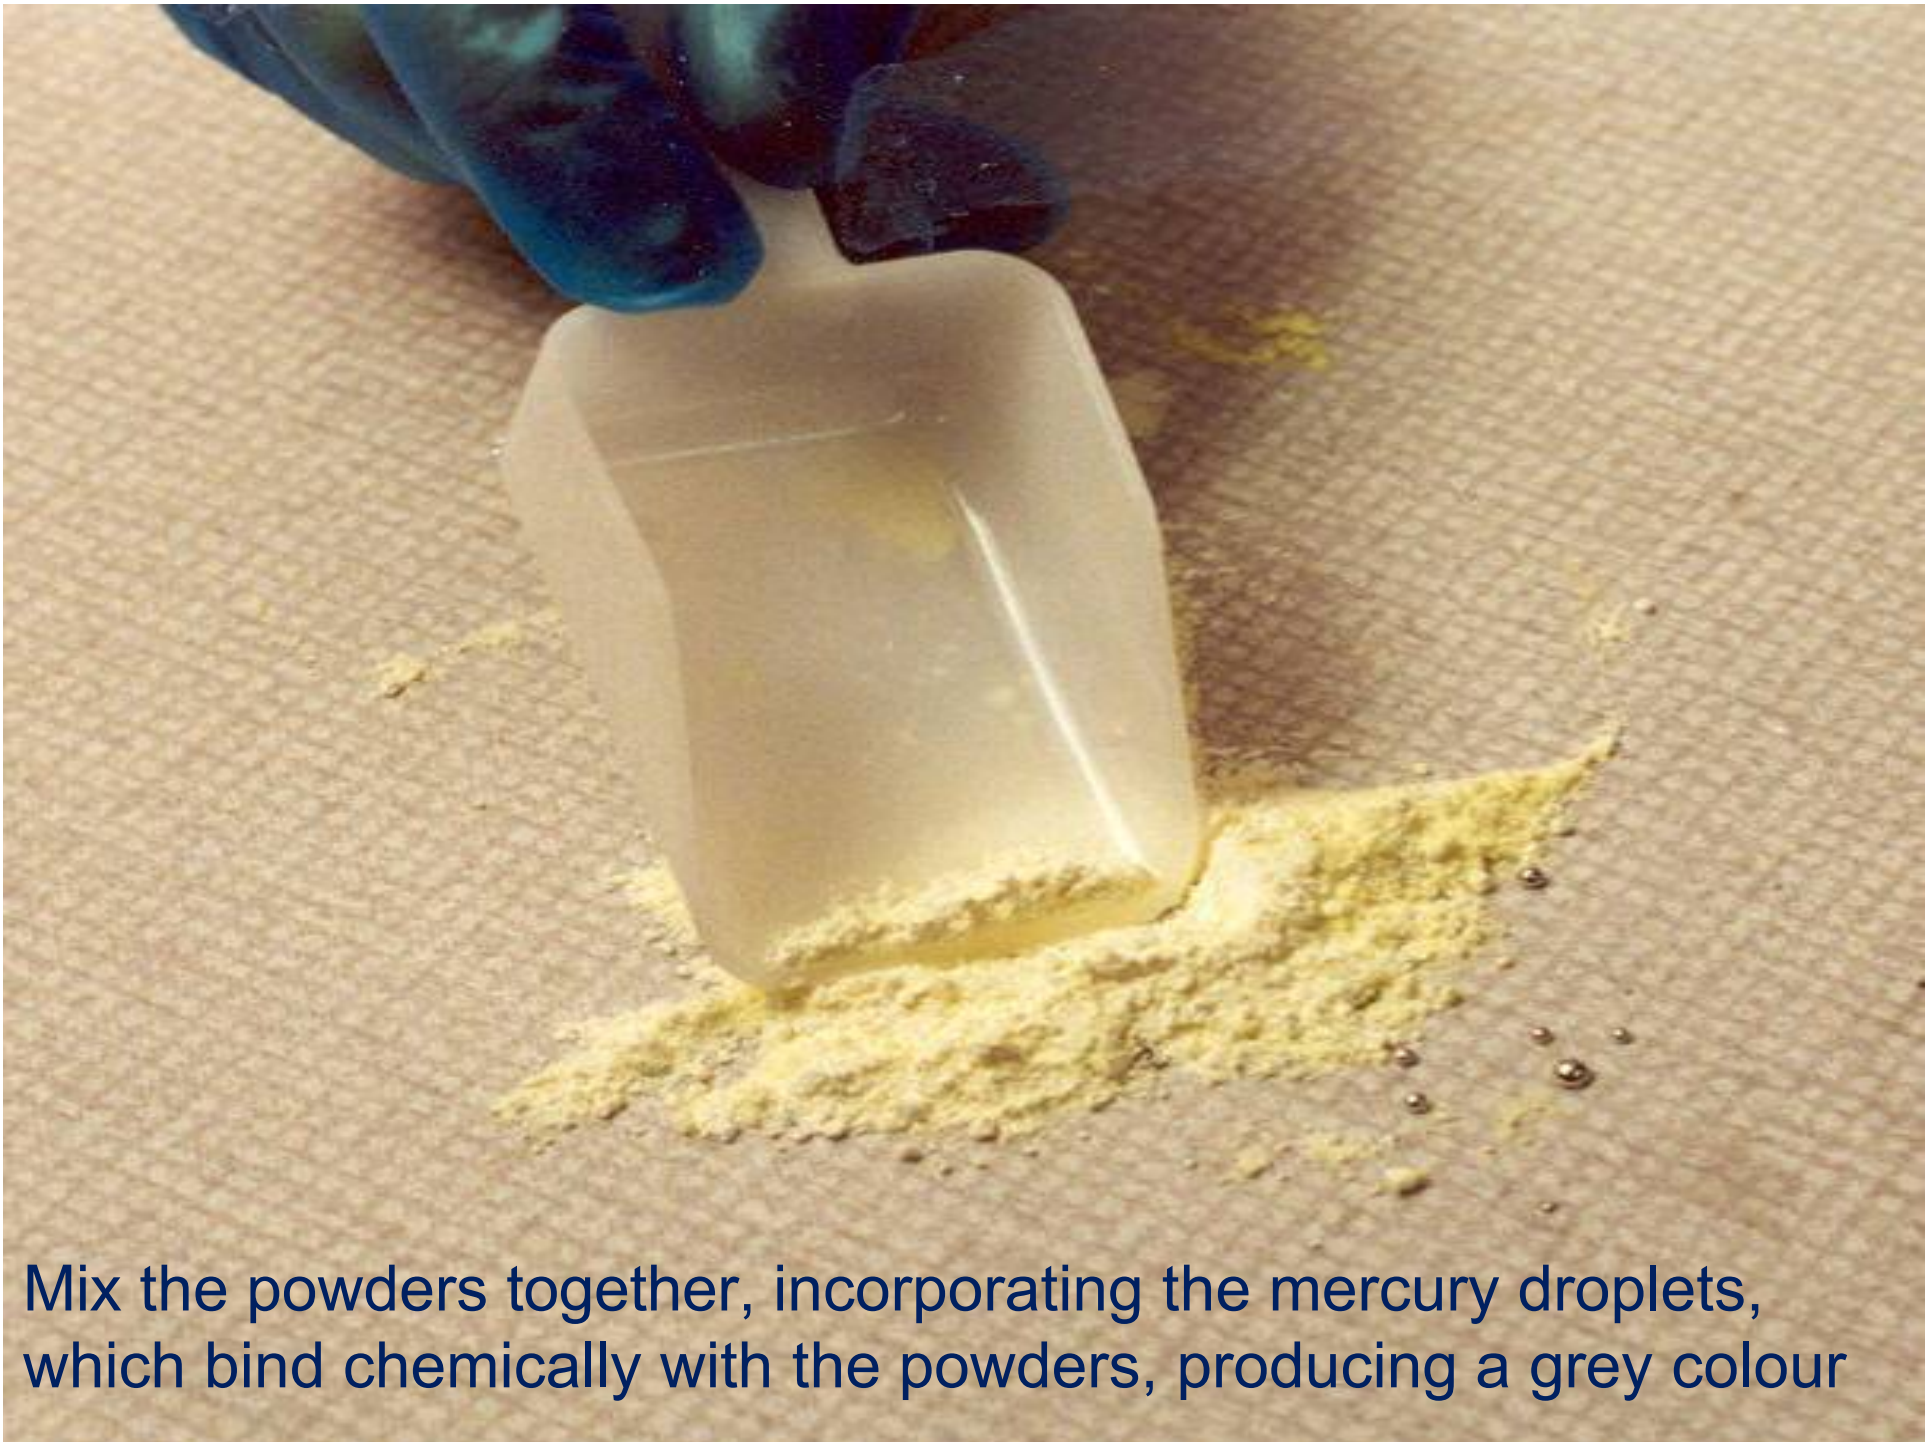


Mix the powders together, incorporating the mercury droplets, which bind chemically with the powders, producing a grey colour

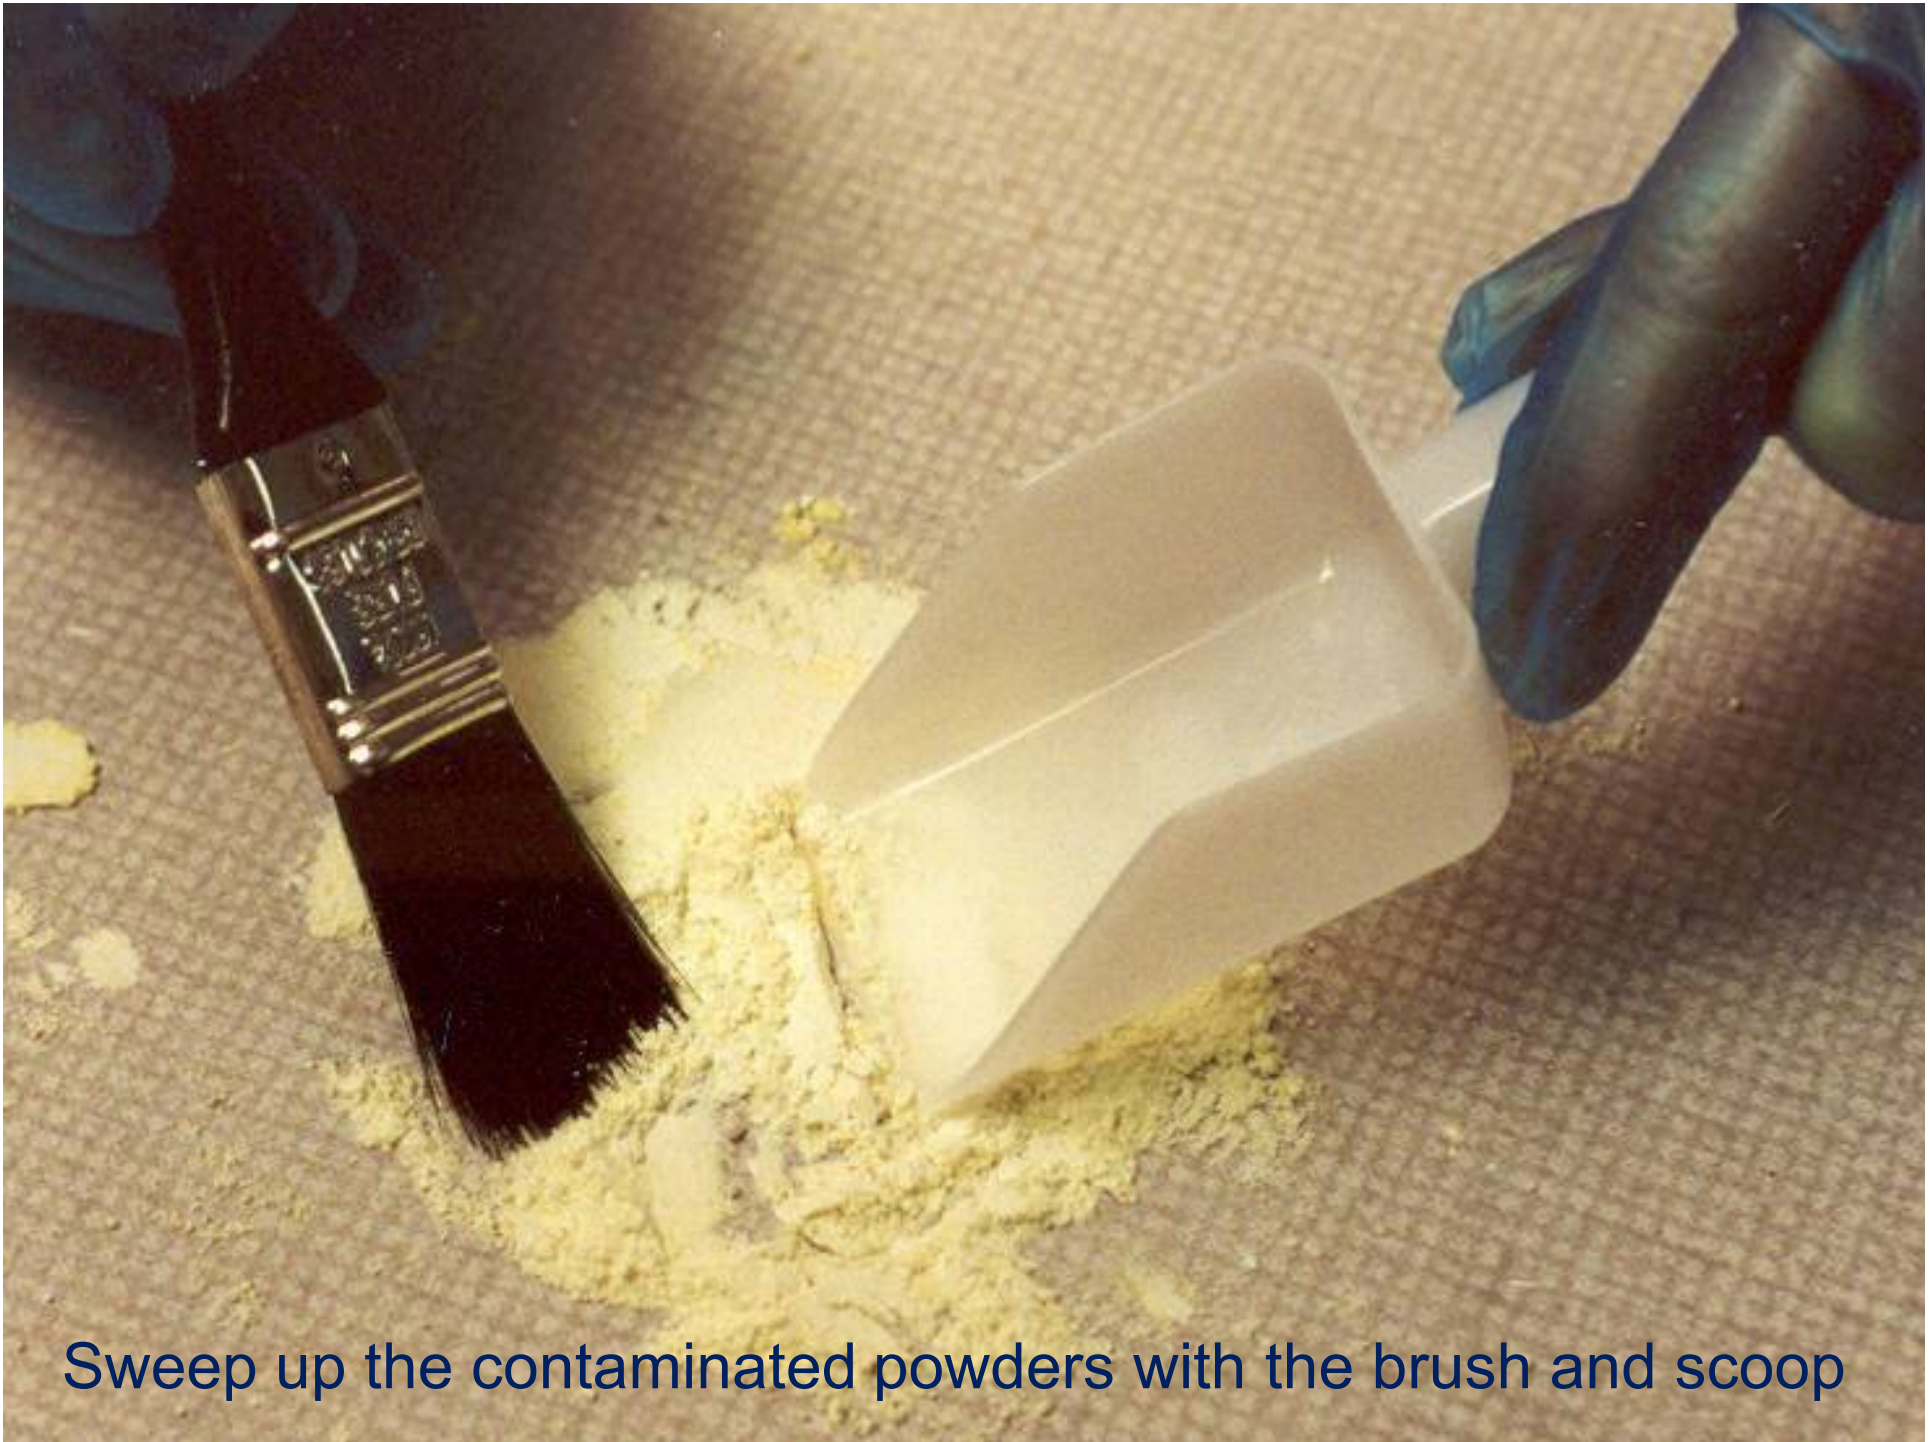

Sweep up the contaminated powders with the brush and scoop




Put the contaminated powders in the waste bottle

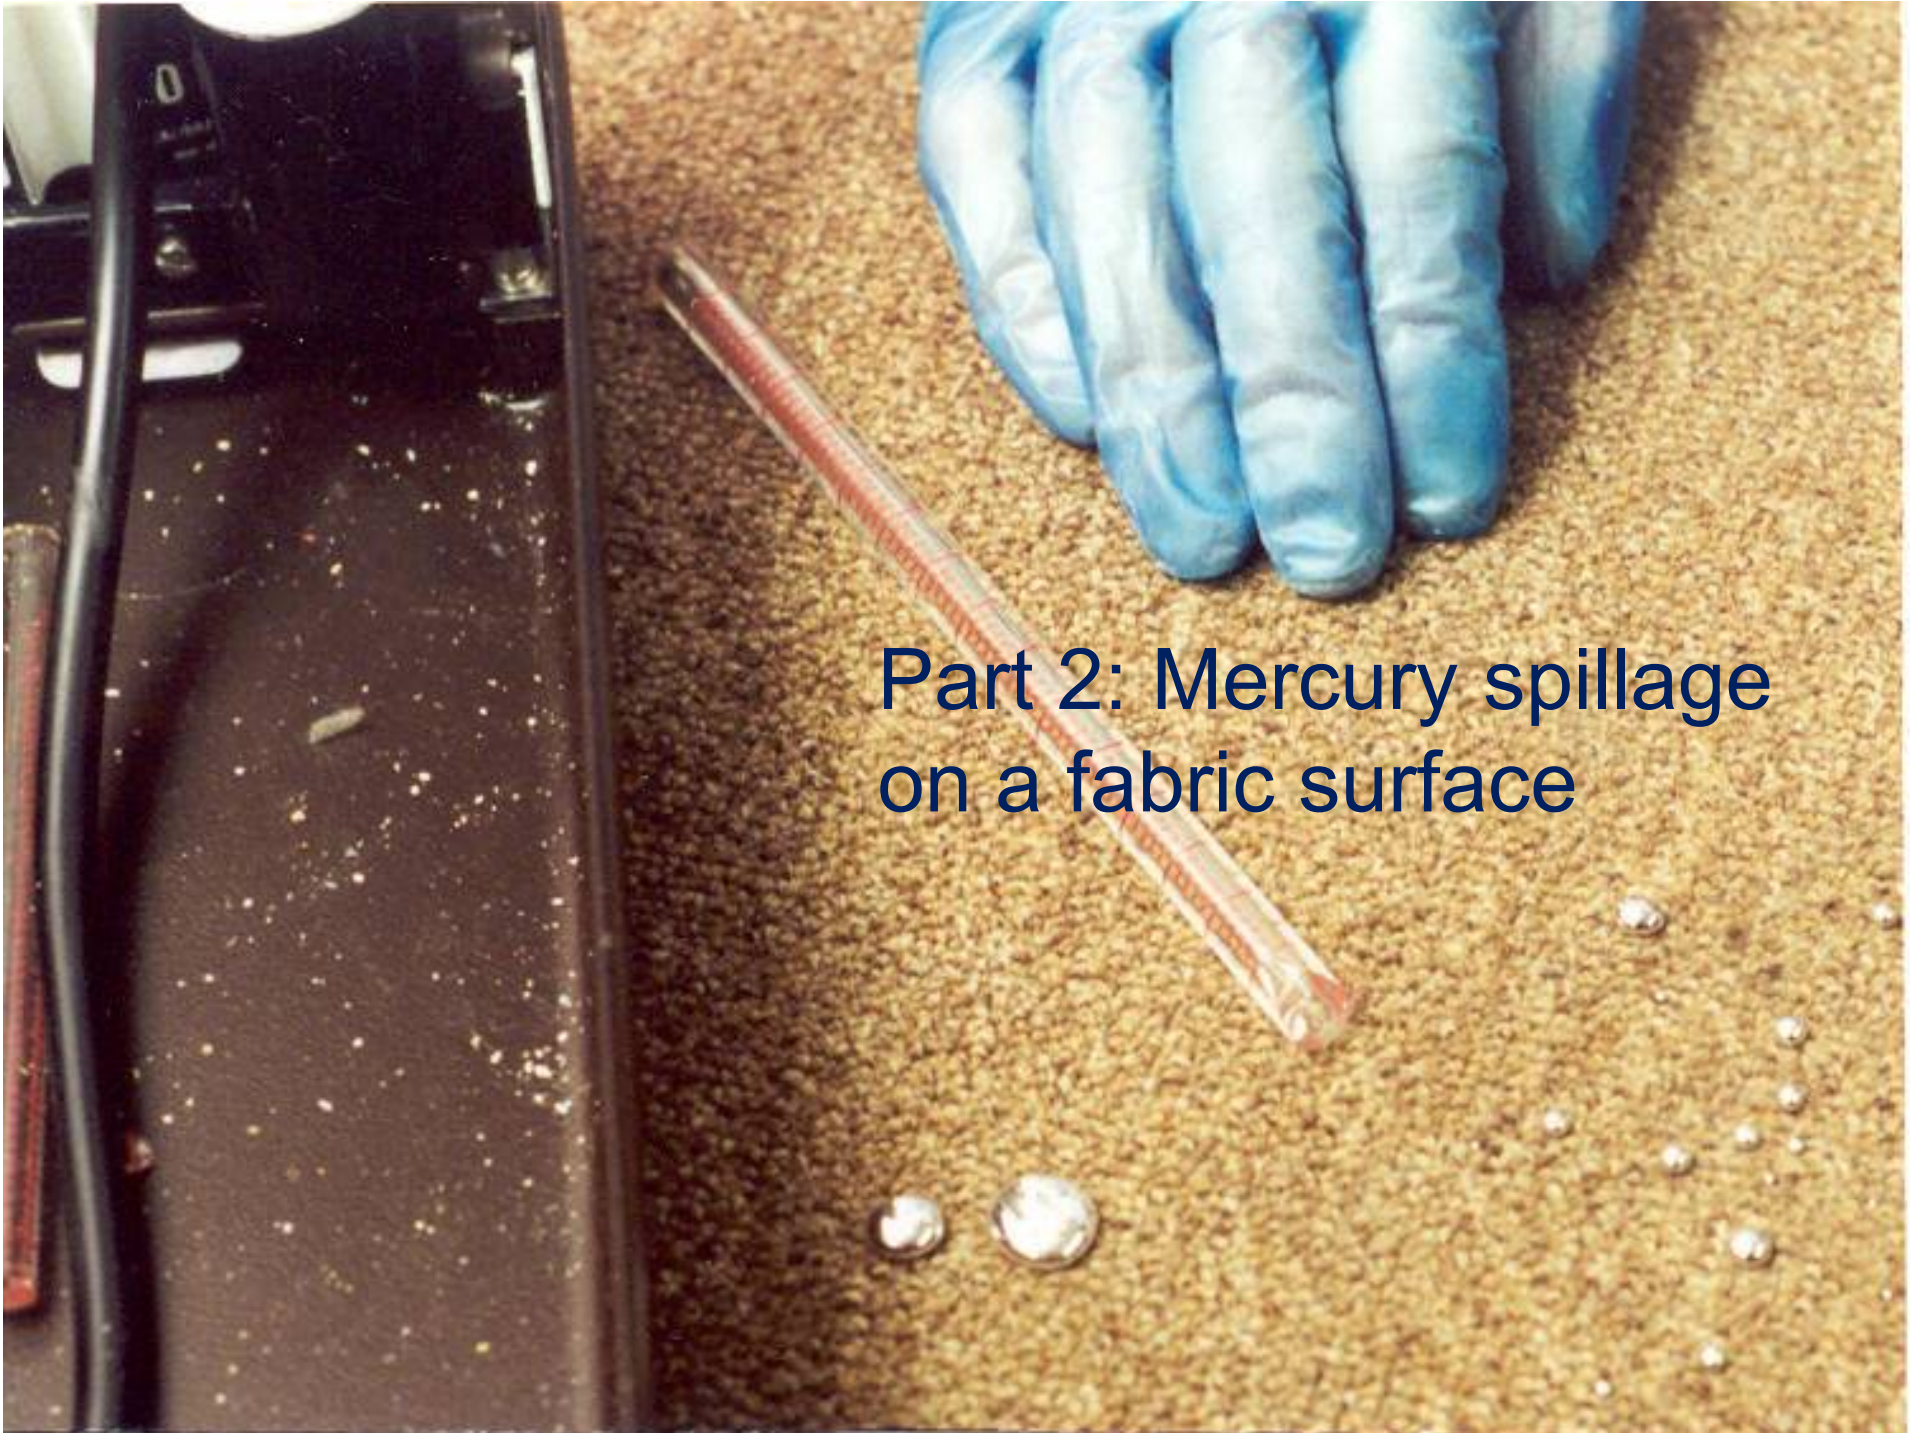

**Part 2: Mercury spillage
on a fabric surface**

Use the syringe and scoop to collect as many large droplets as possible

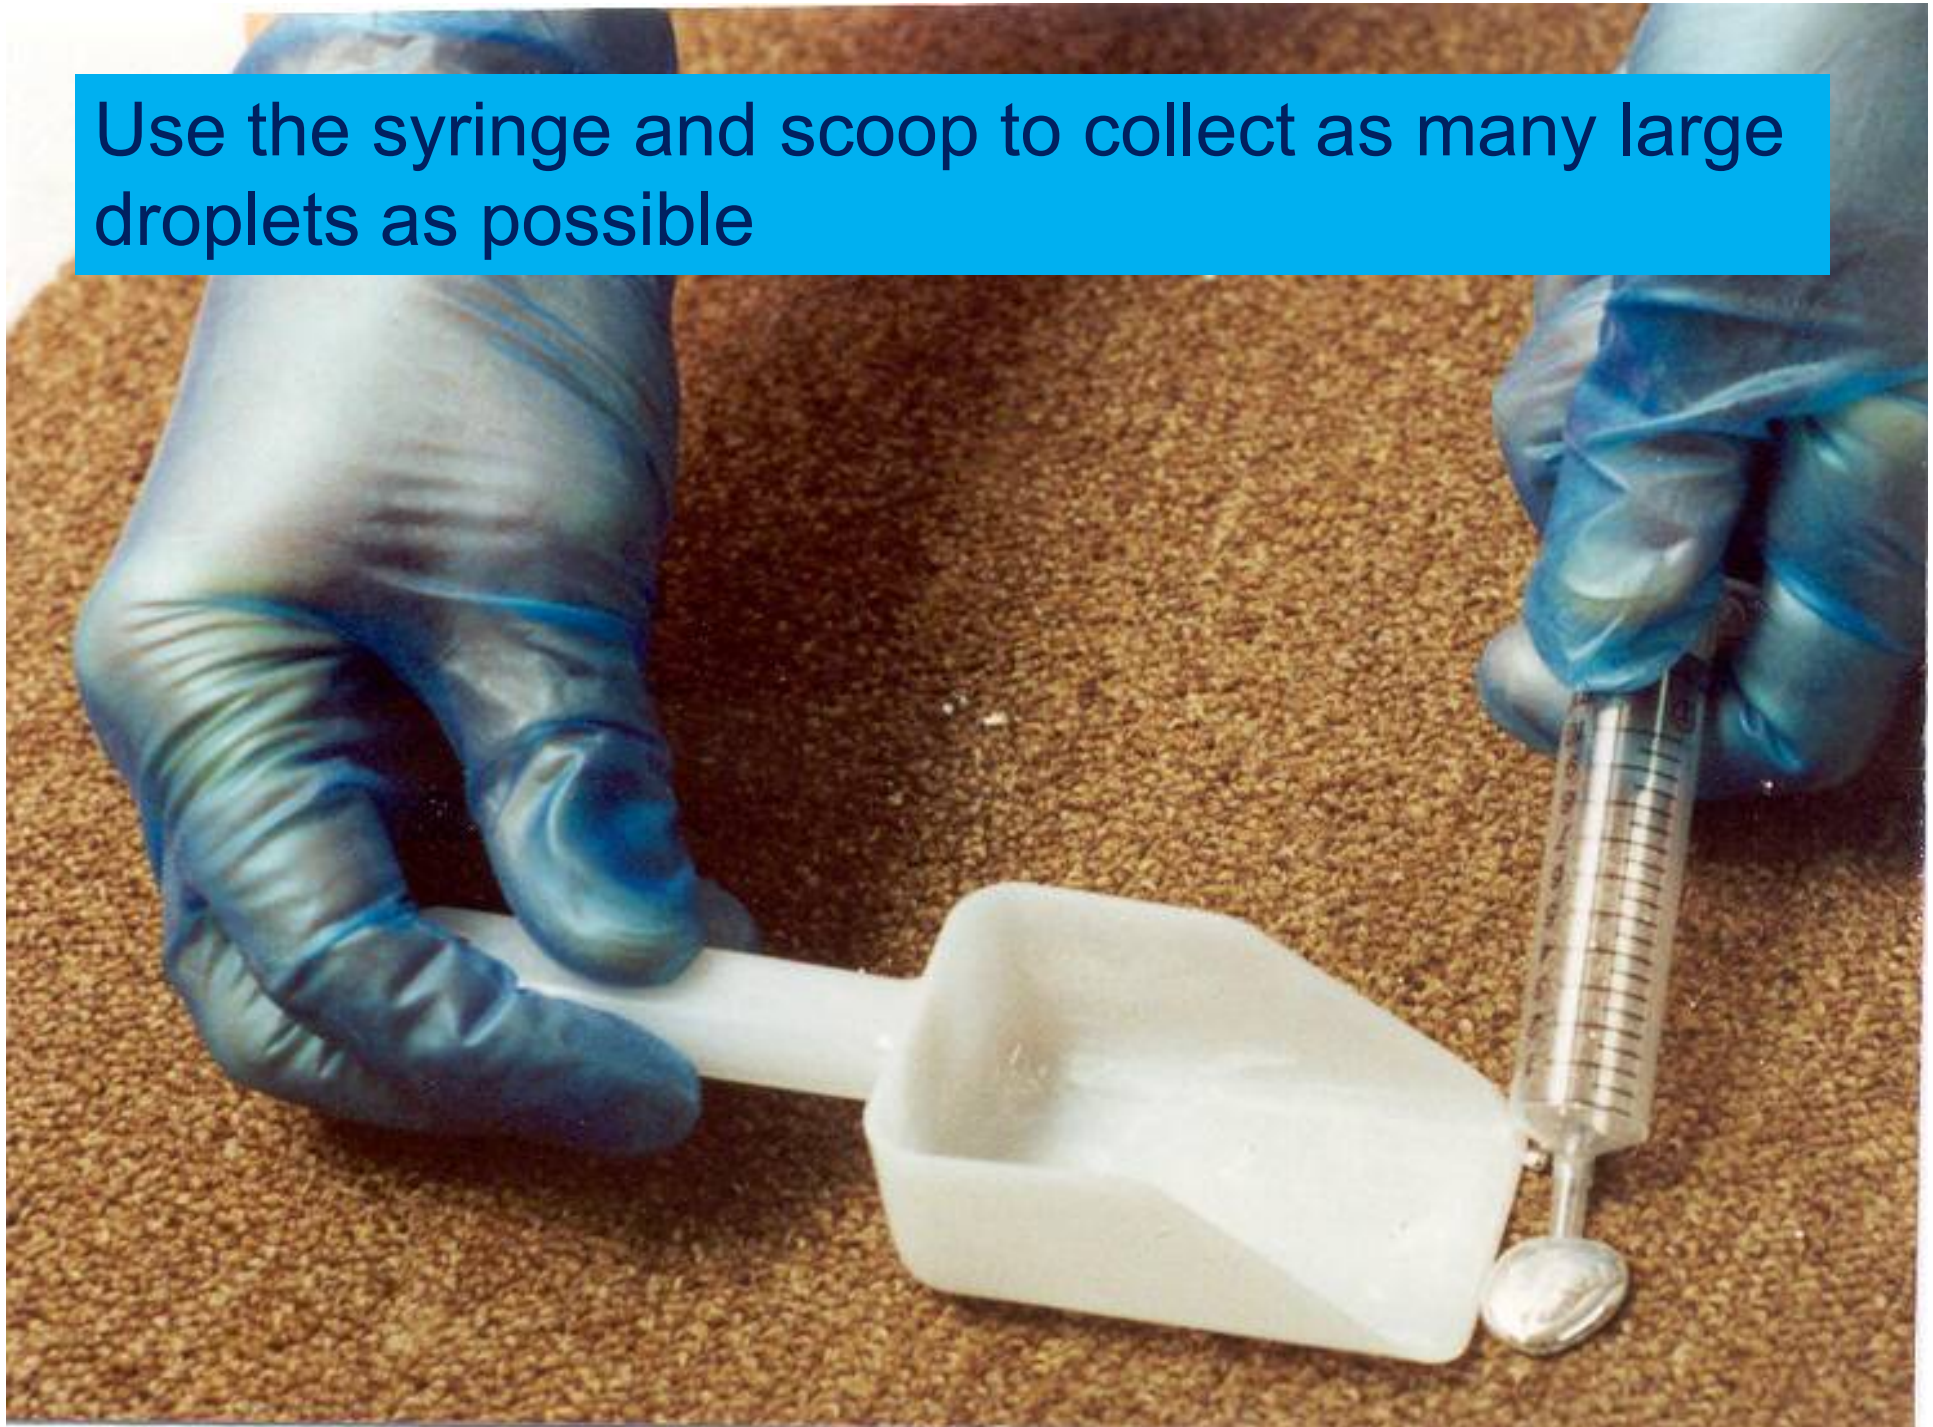




Transfer to the waste bottle



Pinch off a wad of alloy wool


Gently dab the alloy wool pad onto the spillage without forcing the mercury deeper into the fabric

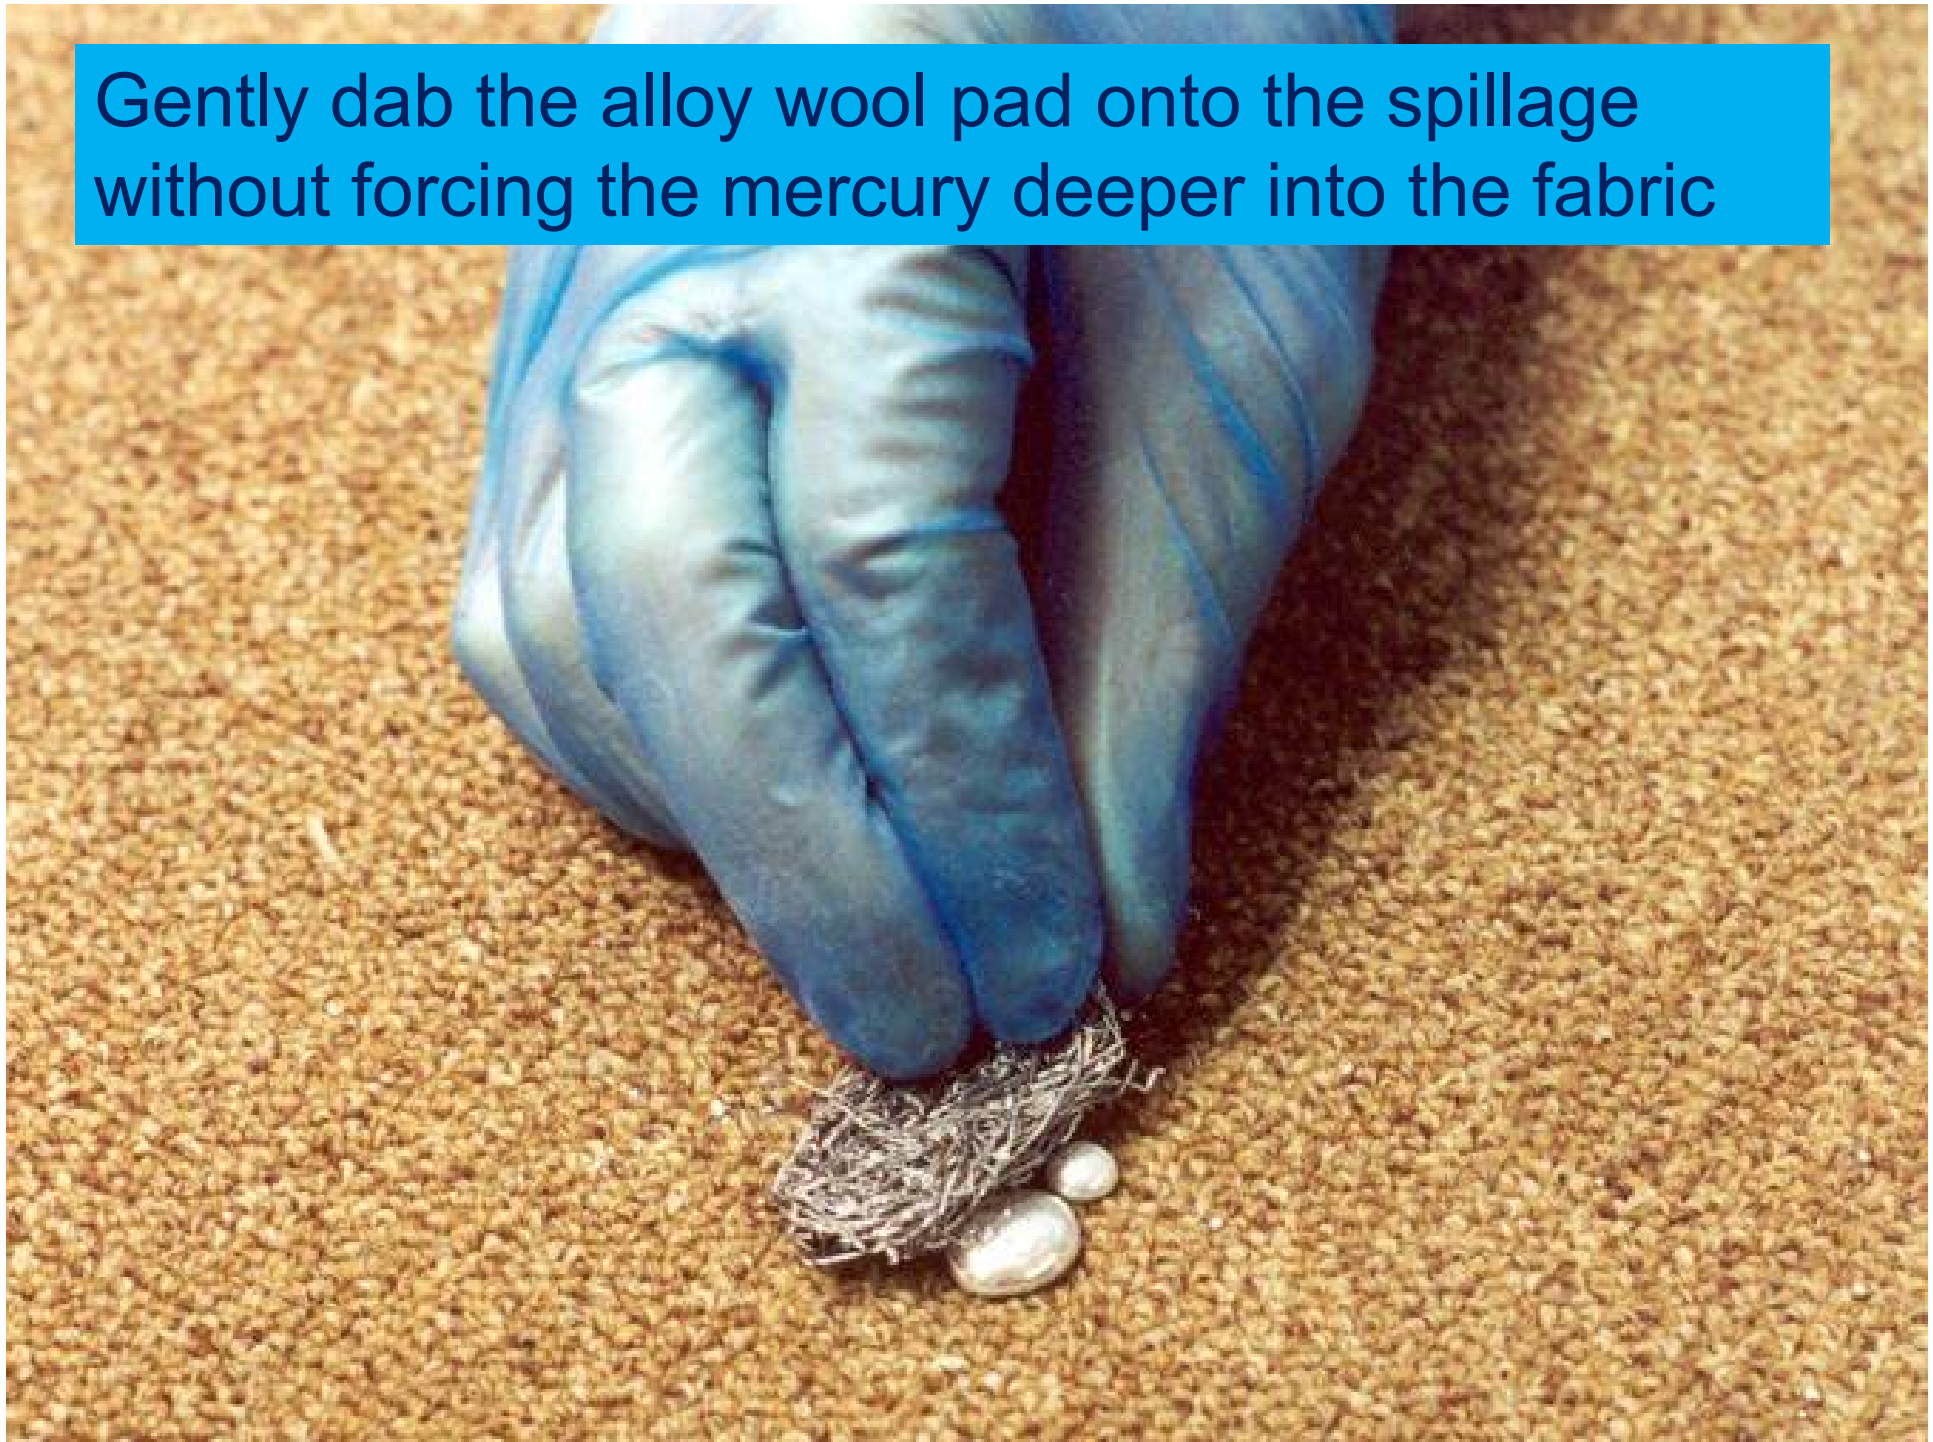

The mercury droplets are lifted off the fabric and absorbed into the pad as they amalgamate with the alloy



Discard the contaminated alloy wool into the waste bottle, cap the bottle tightly

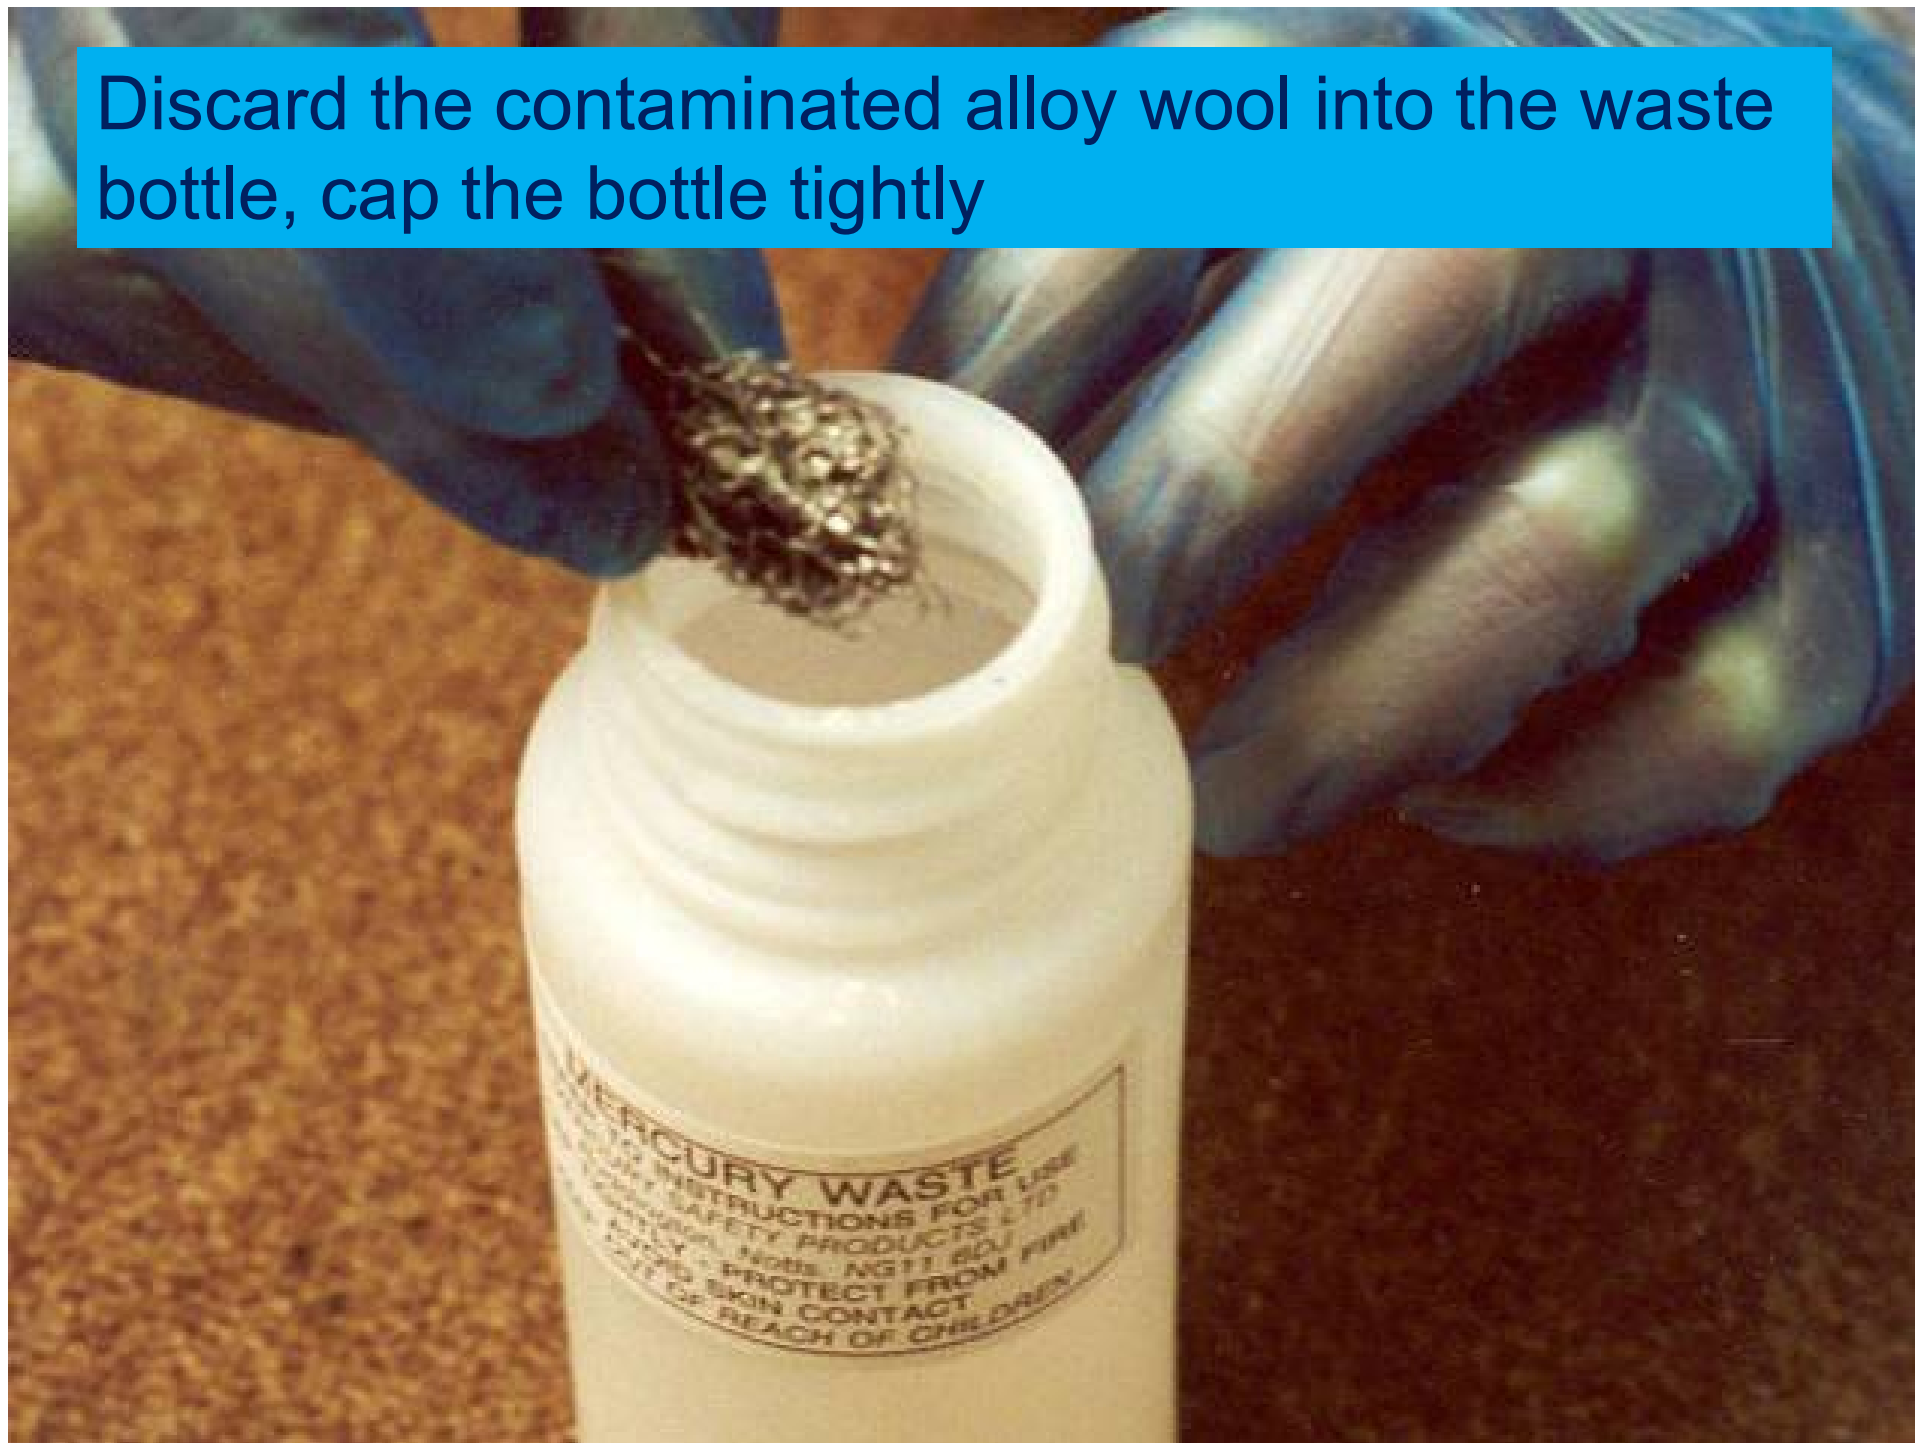



MERCURY

SAFETY PRODUCTS LTD

For online ordering, further information,
advice and replacement parts go to

www.mercurysafety.com